 



# Life Cycle 95Ci

## General Assembly


95C-0XXX-01  
S/N LCI100001

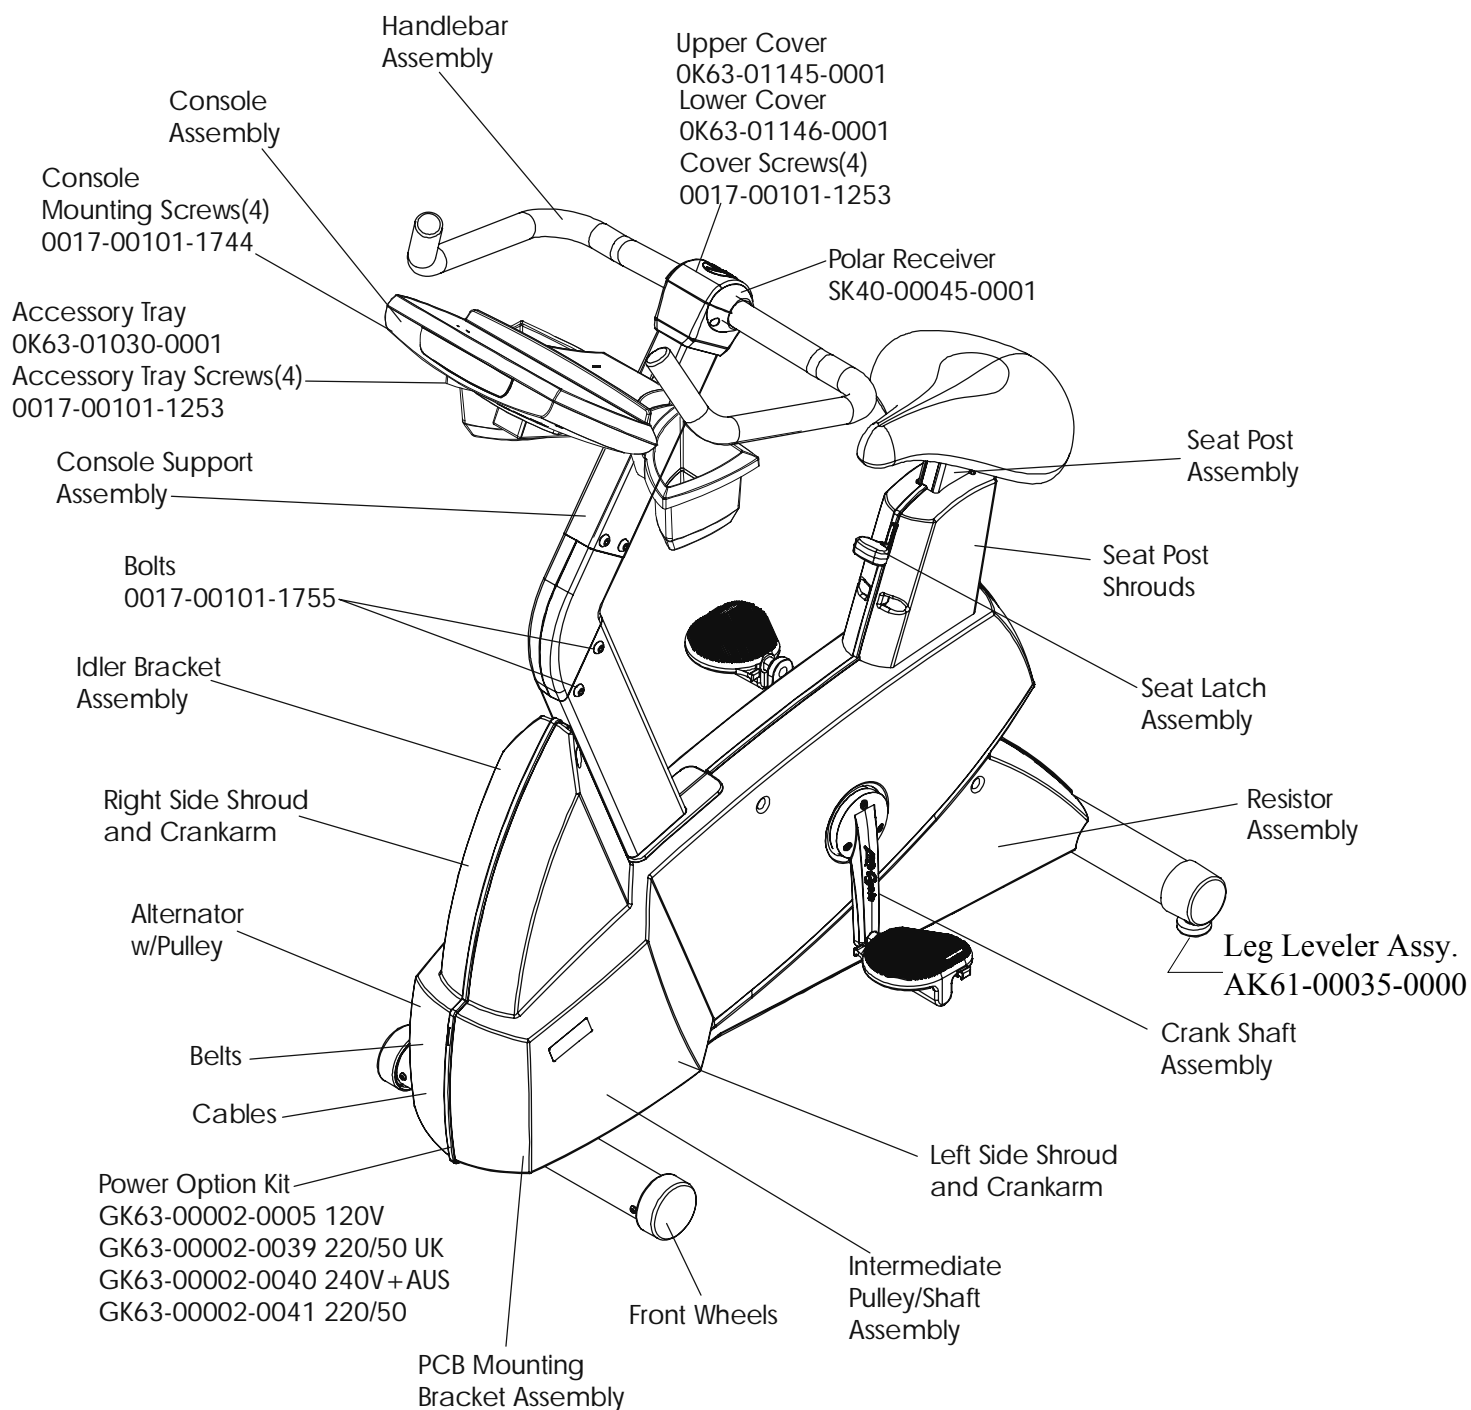

 Description	Part Number
Service Manual	M051-00K63-A009
Operator Manual	M051-00K63-A064
Hardware Bag	GK63-00002-0044
KIT: Serv: Plug in Down	GK63-00002-0005
KIT: Serv: Plug in Down	GK63-00002-0039
KIT: Serv: Plug in Down	GK63-00002-0040
KIT: Serv: Plug in Down	GK63-00002-0041

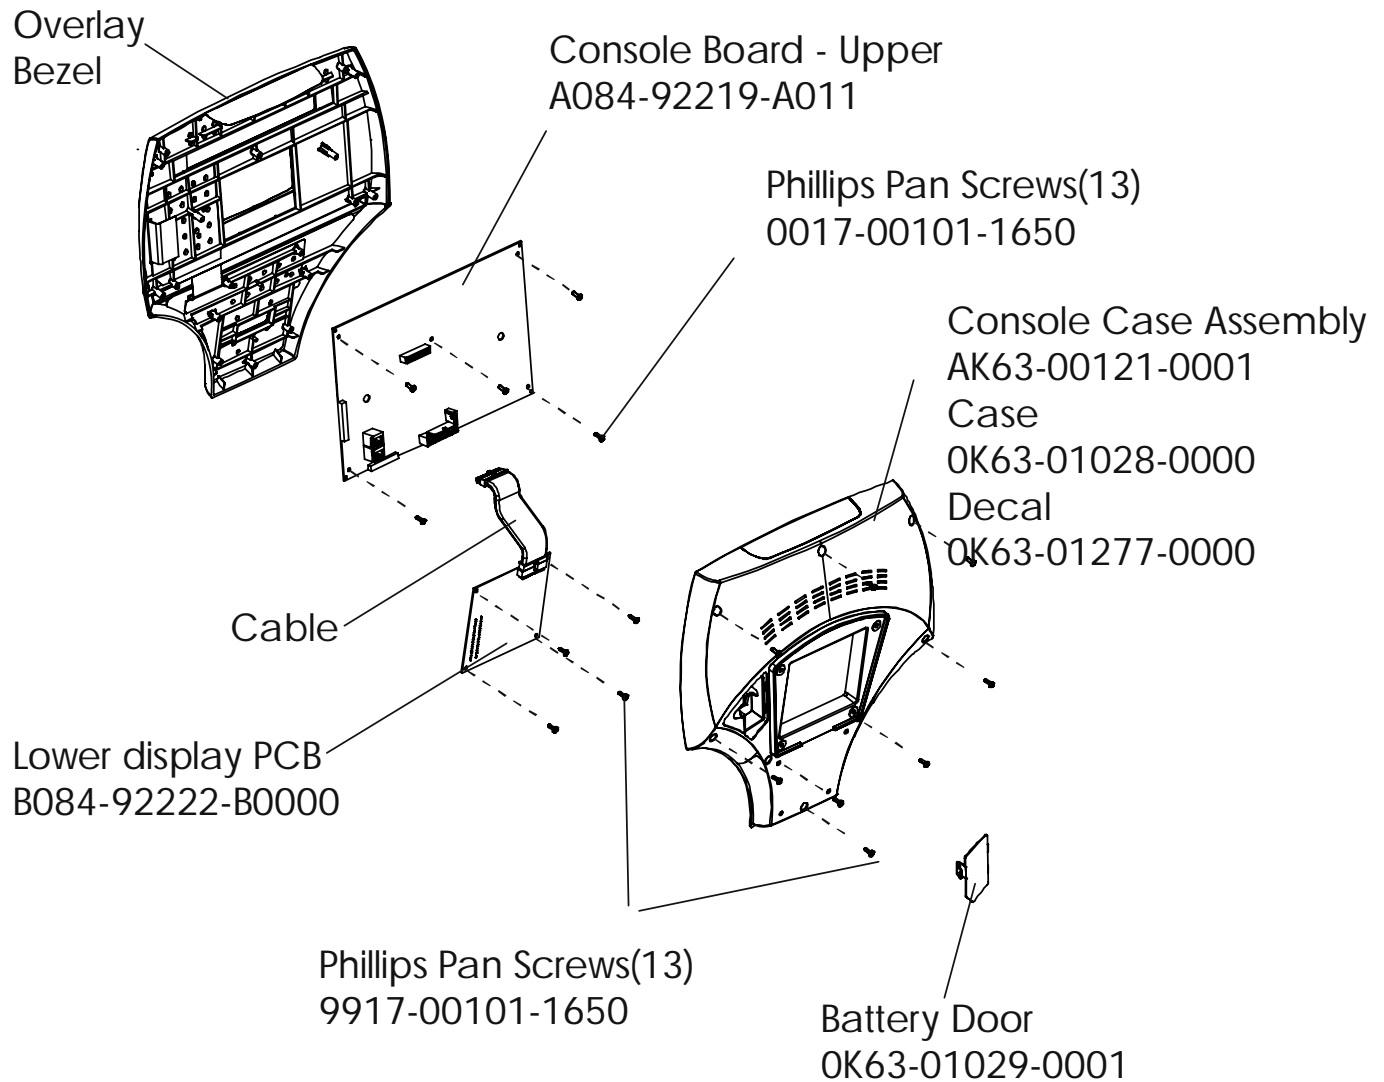


Console Assembly	Overlay Bezel
AK63-00160-0001 Eng Met	AK63-00165-0001 Eng Met
AK63-00160-0003 Ger Met	AK63-00165-0003 Ger Met
AK63-00160-0004 Spn Met	AK63-00165-0004 Spn Met
AK63-00160-0006 Jap Met	AK63-00165-0006 Jap Met
AK63-00160-0007 Frn Met	AK63-00165-0007 Frn Met
AK63-00160-0008 Itl Met	AK63-00165-0008 Itl Met
AK63-00160-0009 Dut Met	AK63-00165-0009 Dut Met
AK63-00160-0010 Por Met	AK63-00165-0010 Por Met

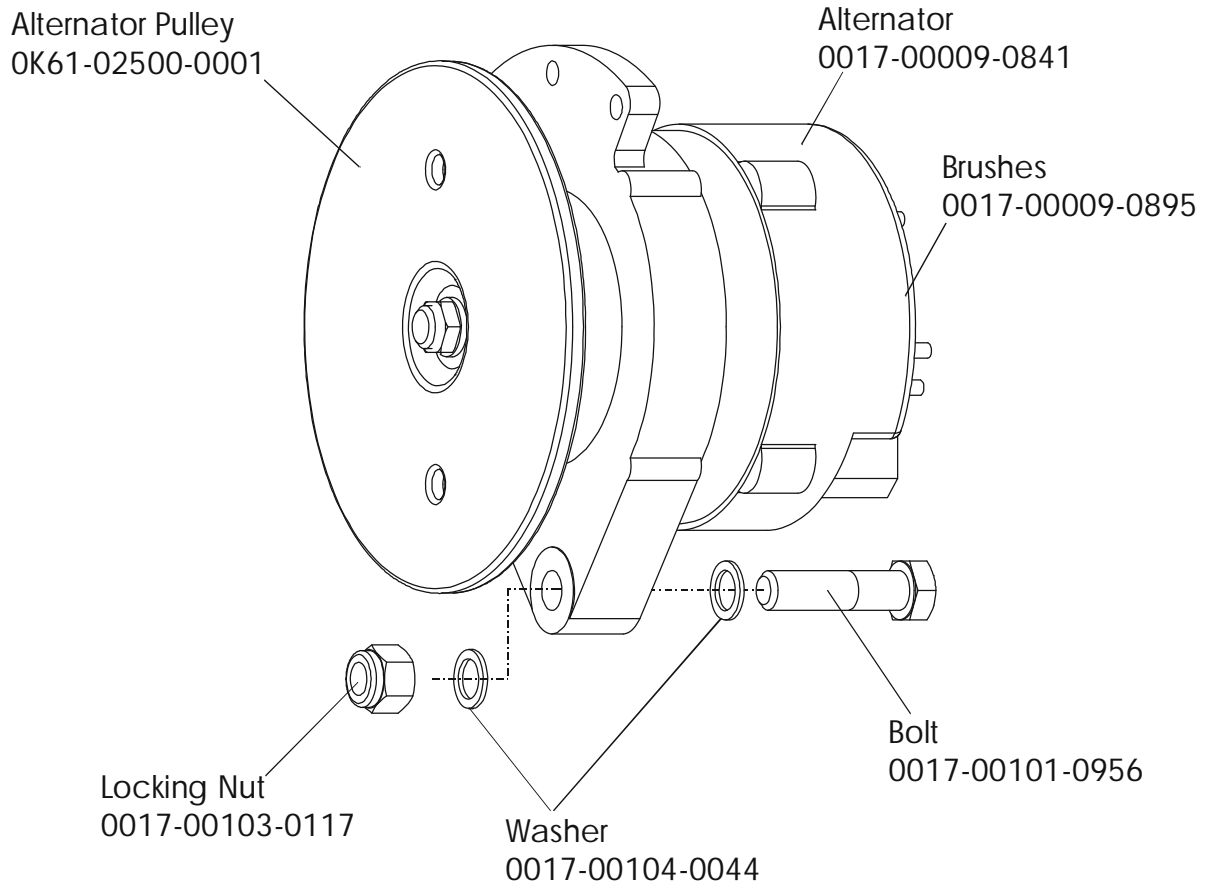 

**Life Cycle 95Ci**  
**Crank Shaft and Bearings**

 **95C-0XXX-01**  
**S/N LCI100001**

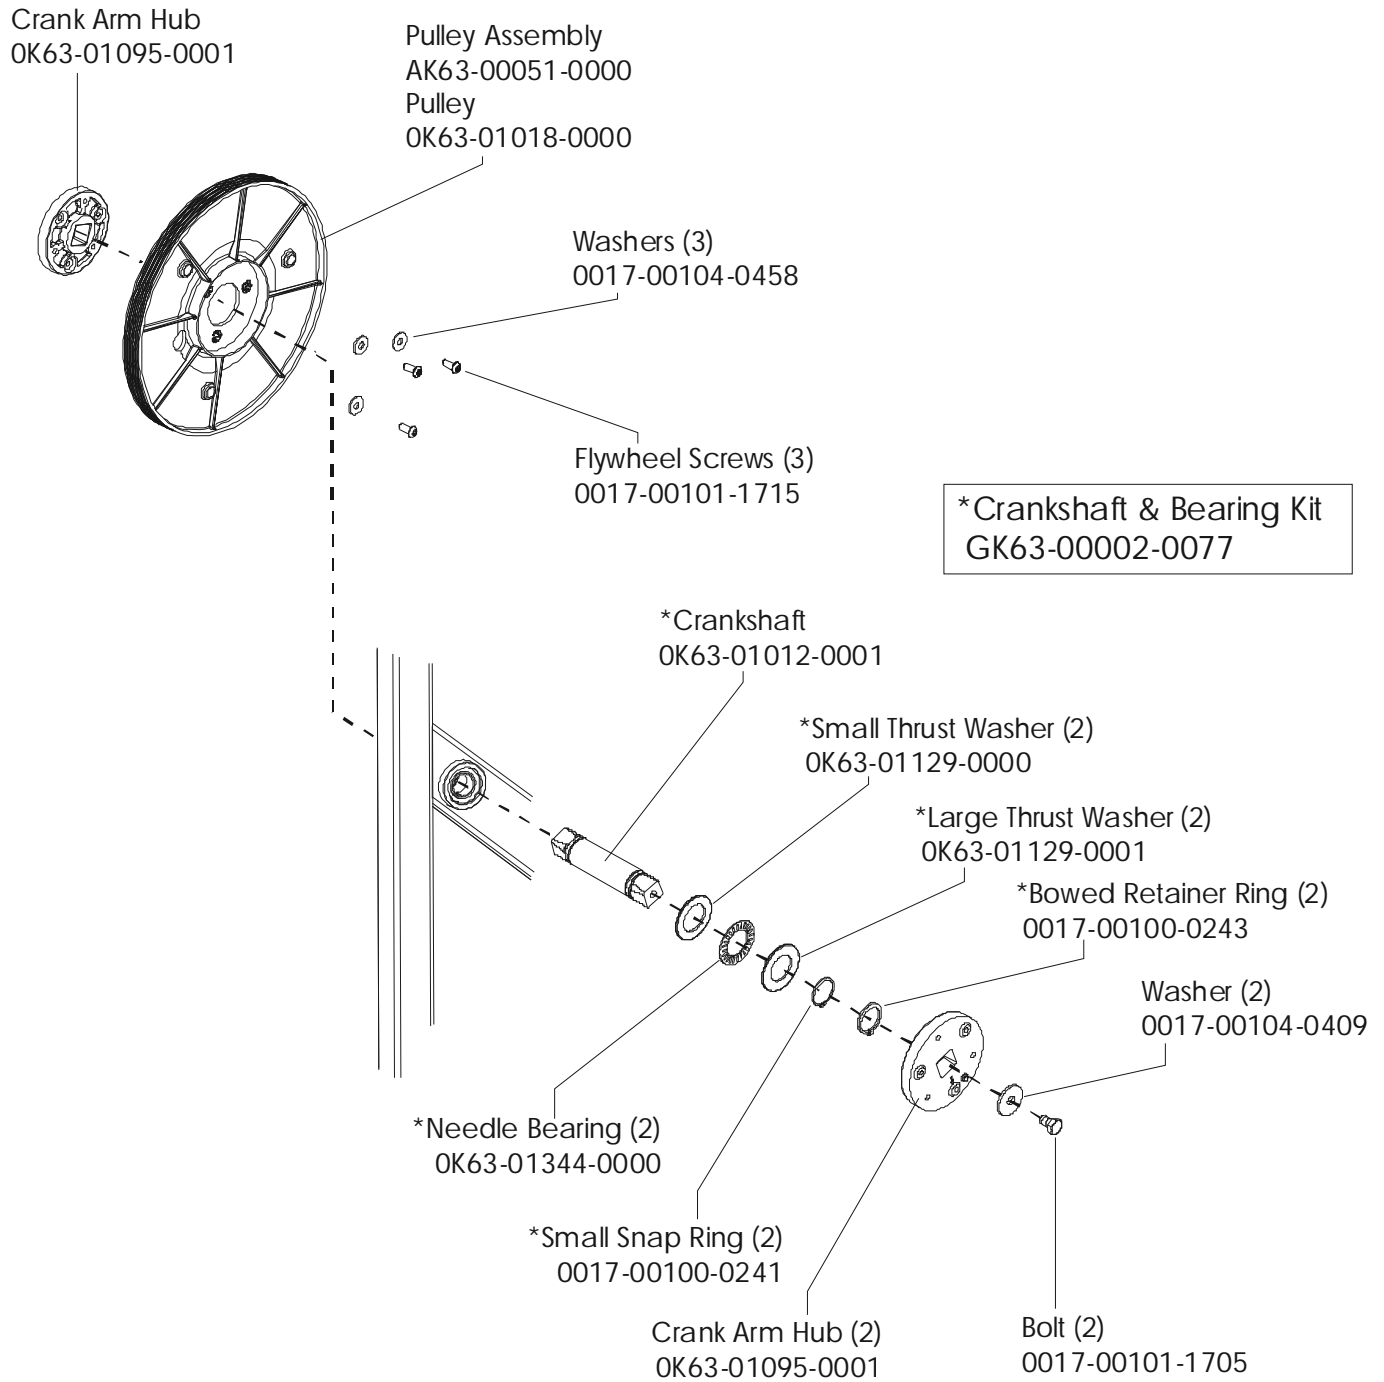


**Life Cycle 95Ci**  
**Intermediate Shaft and Bearings**

**95C-0XXX-01**  
**S/N LCI100001**

Clutch Assembly  
AK63-00026-0000  
(not included in kit)

 Magnet  
118E-00001-0124  
(not included in kit)

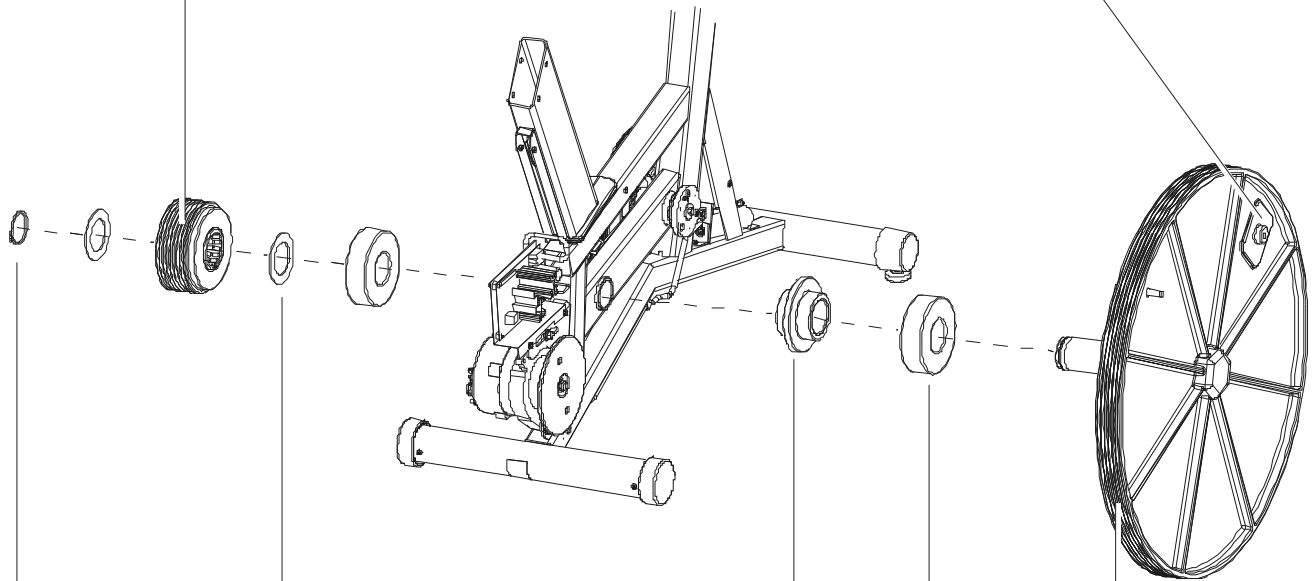

Retaining Ring  
0017-00100-0242

Delrin Washers (2)  
0017-00104-0455

Spacer (not  
available  
separately)

 
Intermediate  
Bearings (2, not  
available  
separately)

Intermediate Pulley  
(not available separately)

 
 
Intermediate Shaft and  
Bearing Assembly Kit  
GK63-00002-0007

**Life Cycle 95Ci**  
**Seat Latch Assy - AK63-00043-0001**

 
**95C-0XXX-01**  
**S/N LCI100001**

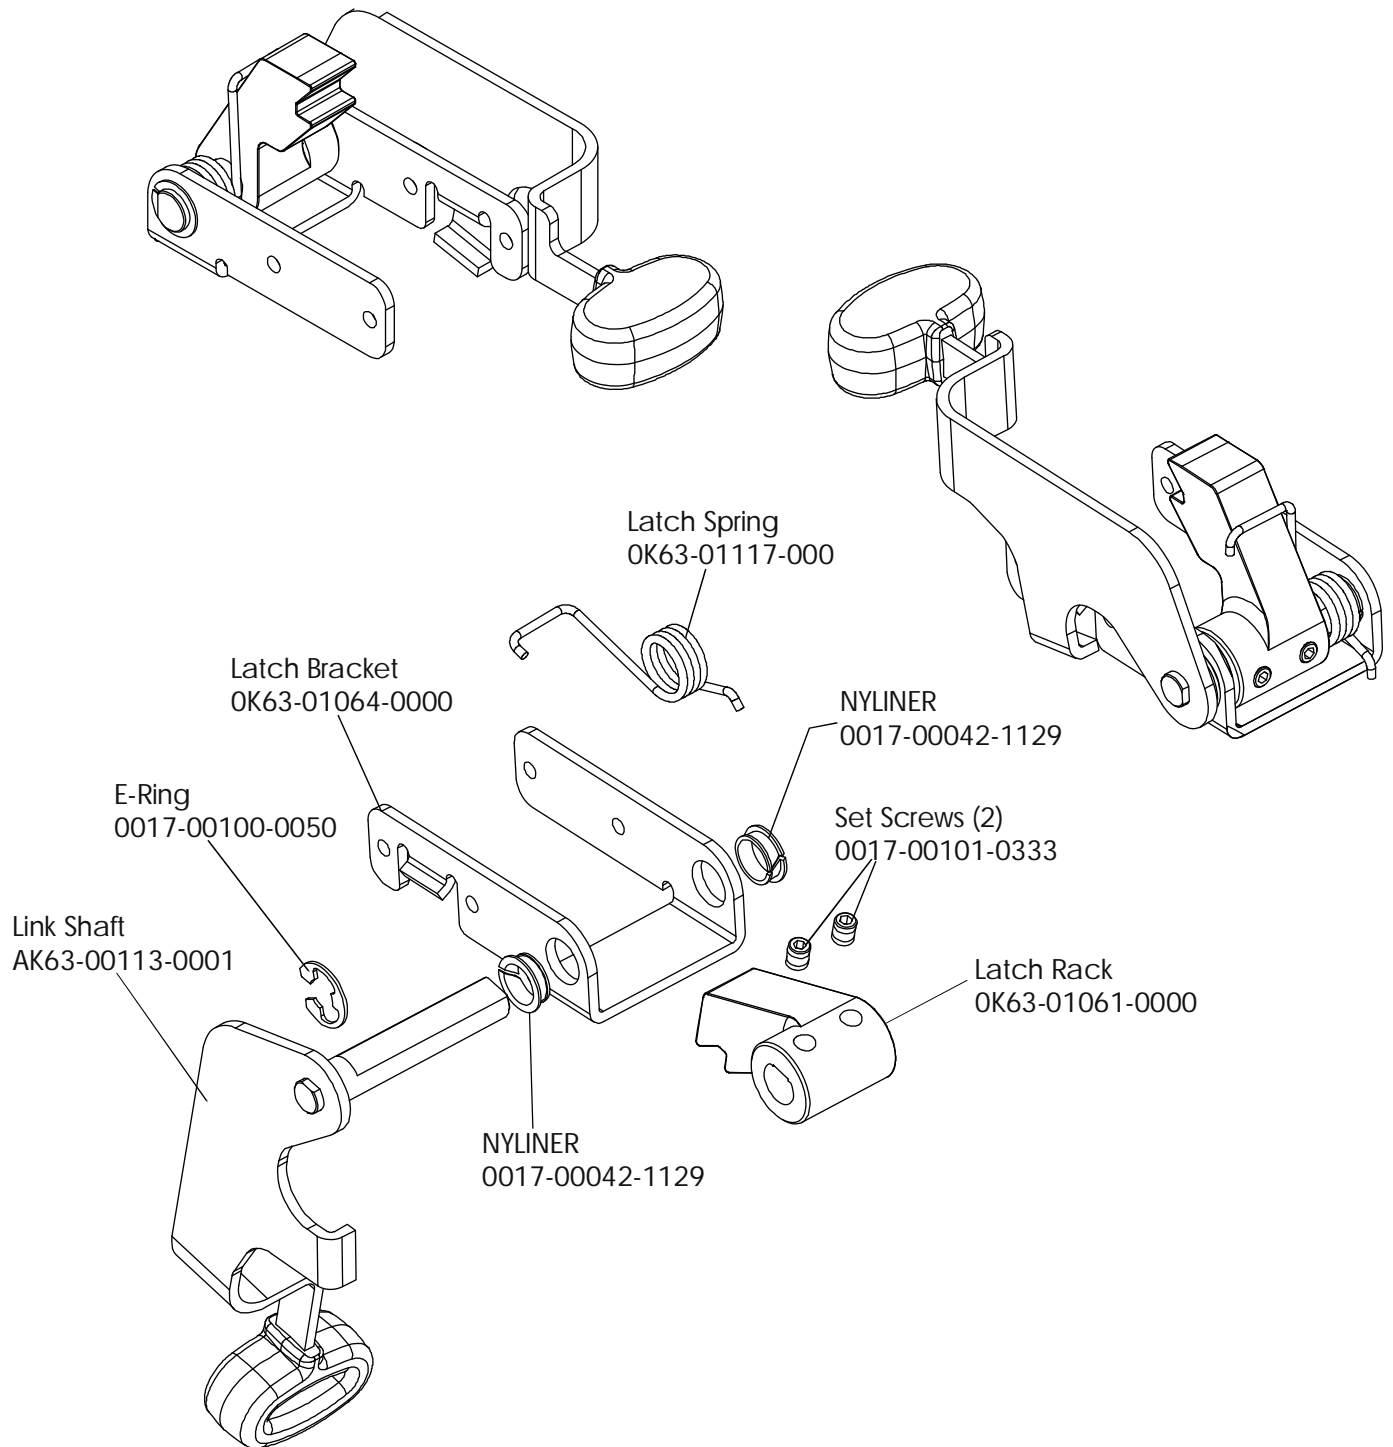 




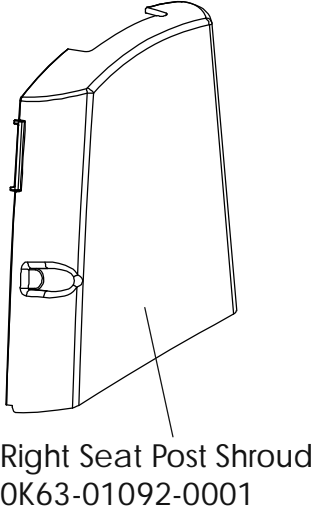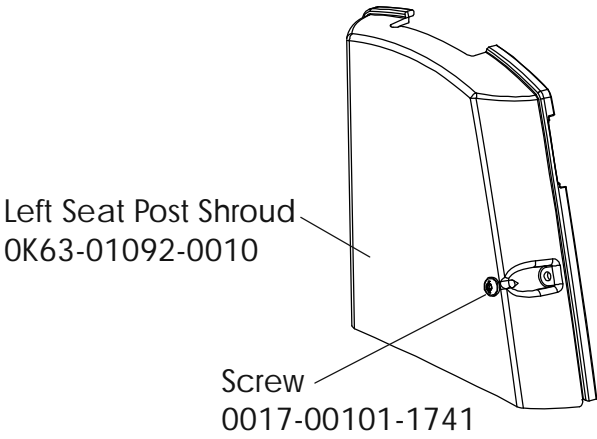



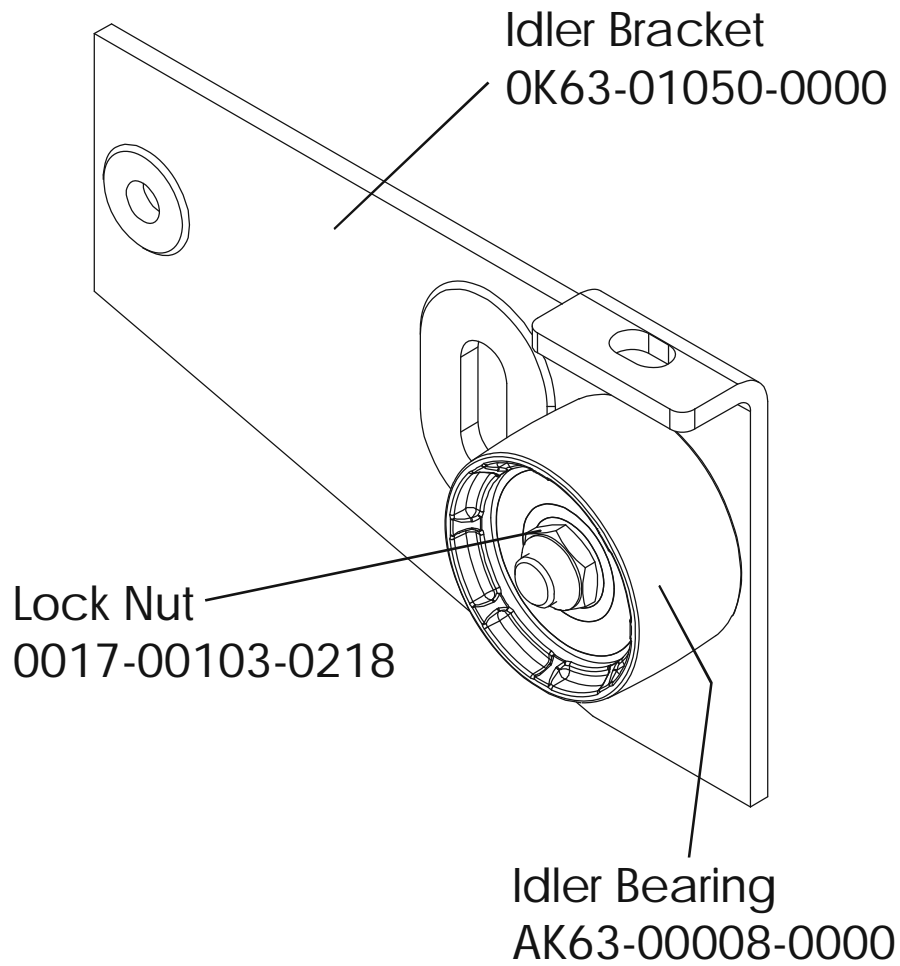

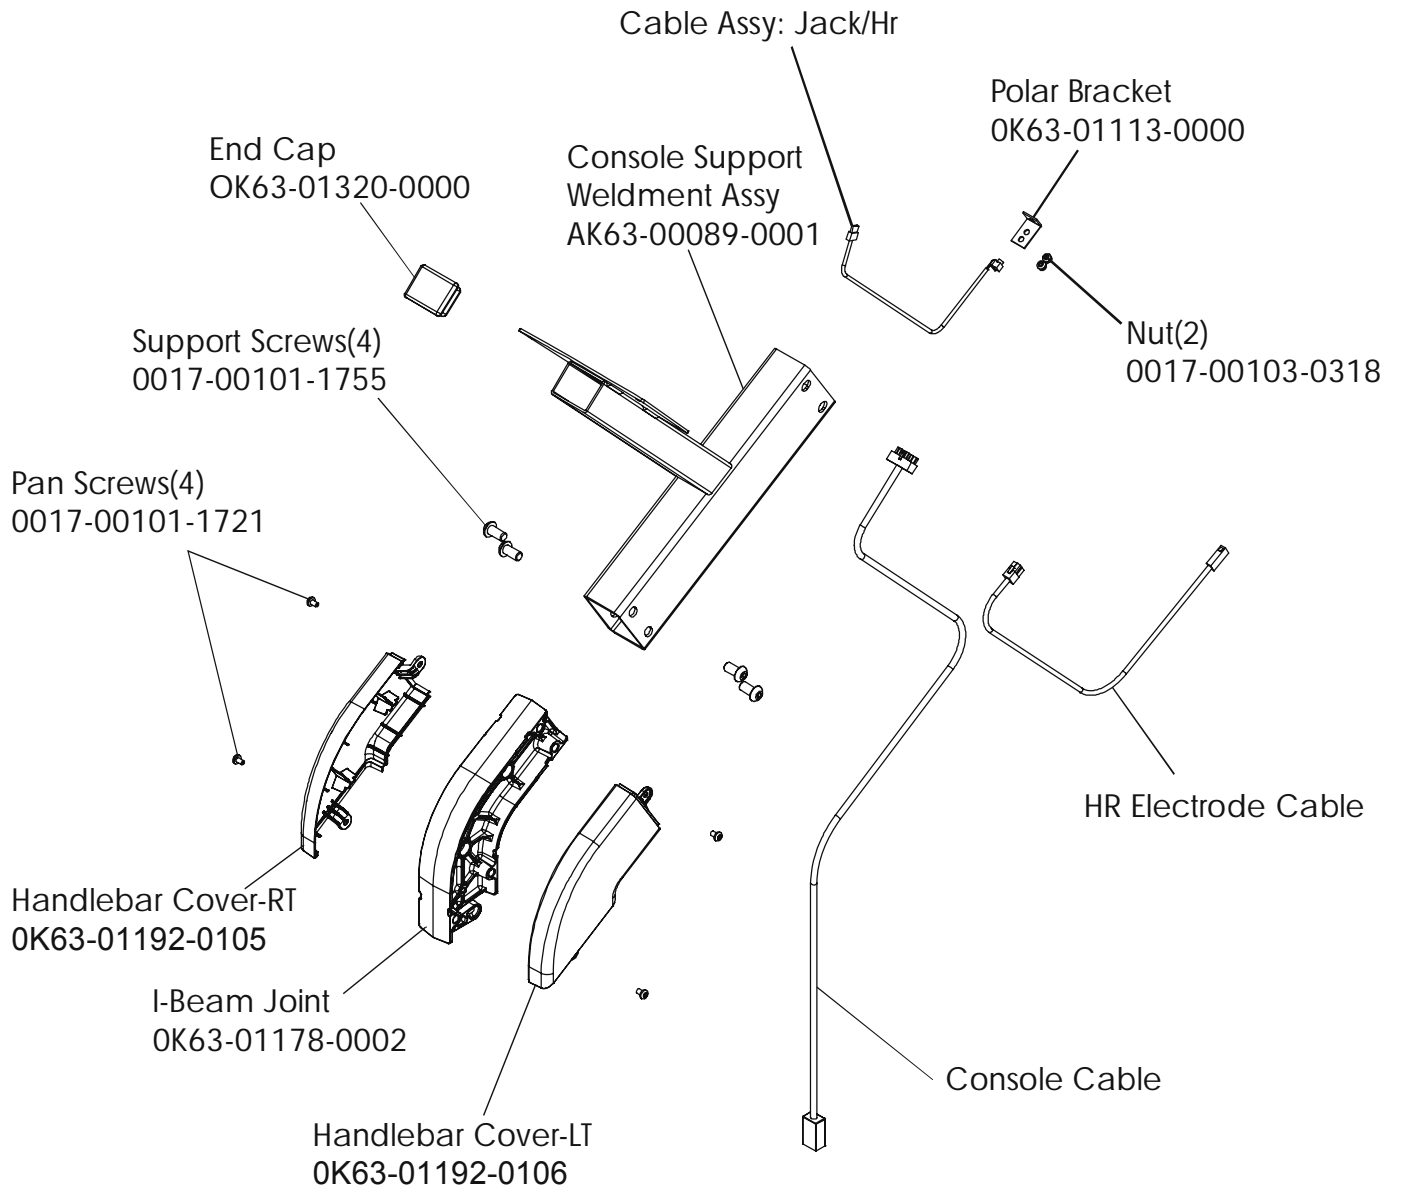


**Life Cycle 95Ci**

**Left Side Shroud and Crank Arm**

**95C-0XXX-01**

 **S/N LCI100001**

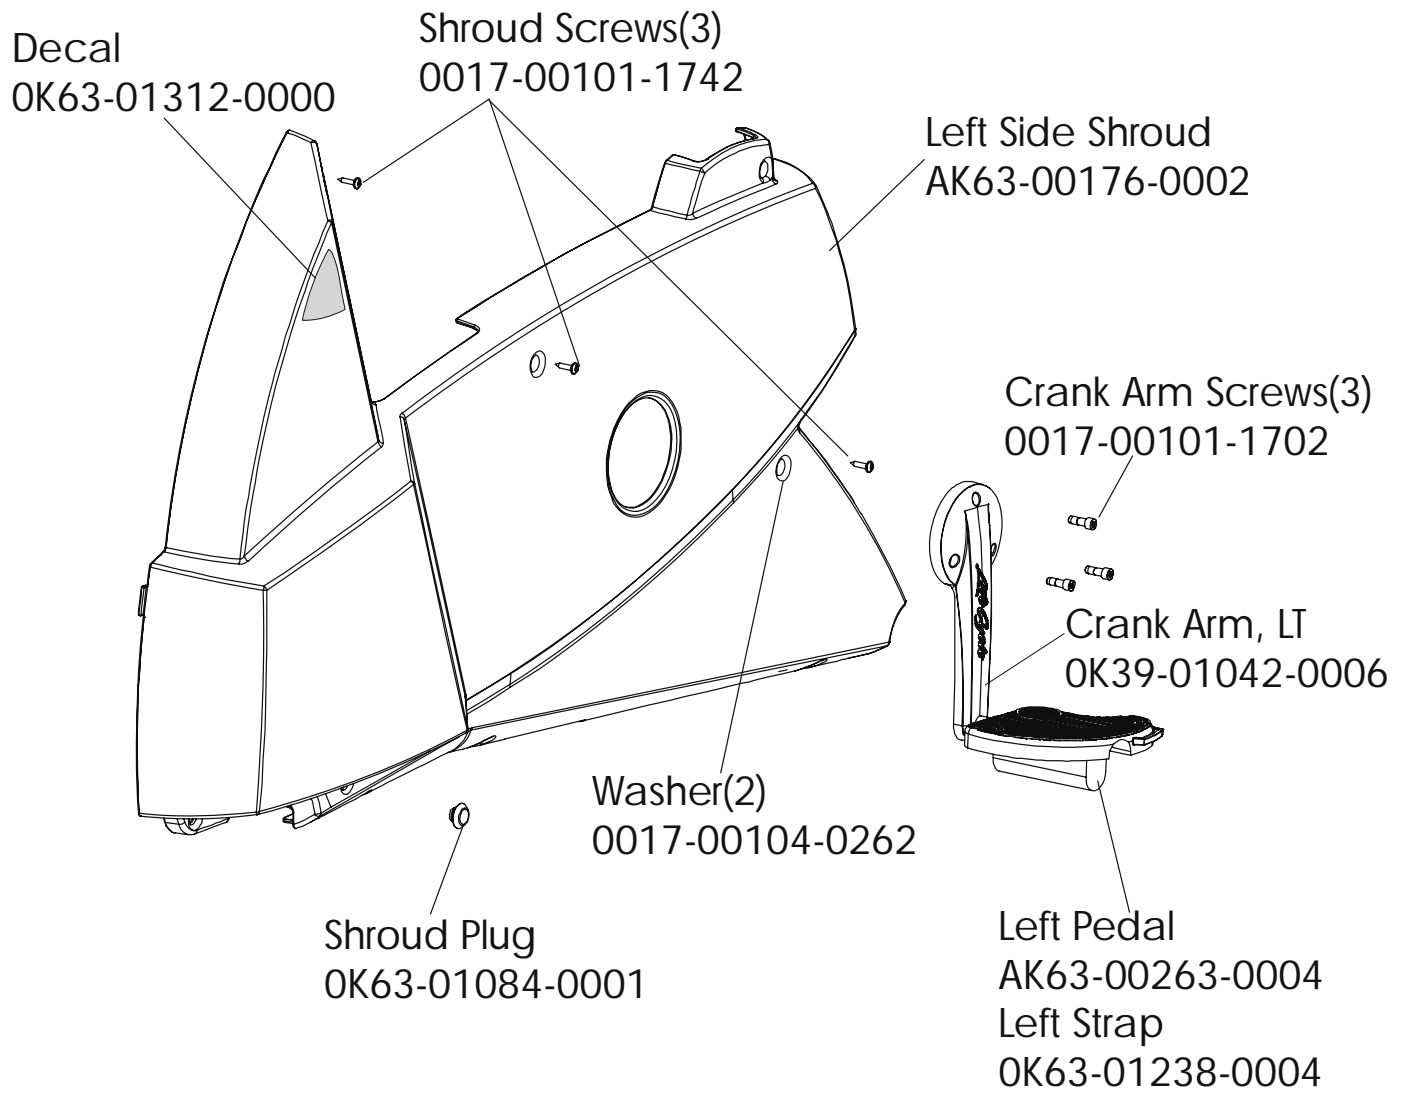


**Life Cycle 95Ci**

**Right Side Shroud and Crank Arm**


**95C-0XXX-01**

 
**S/N LCI100001**

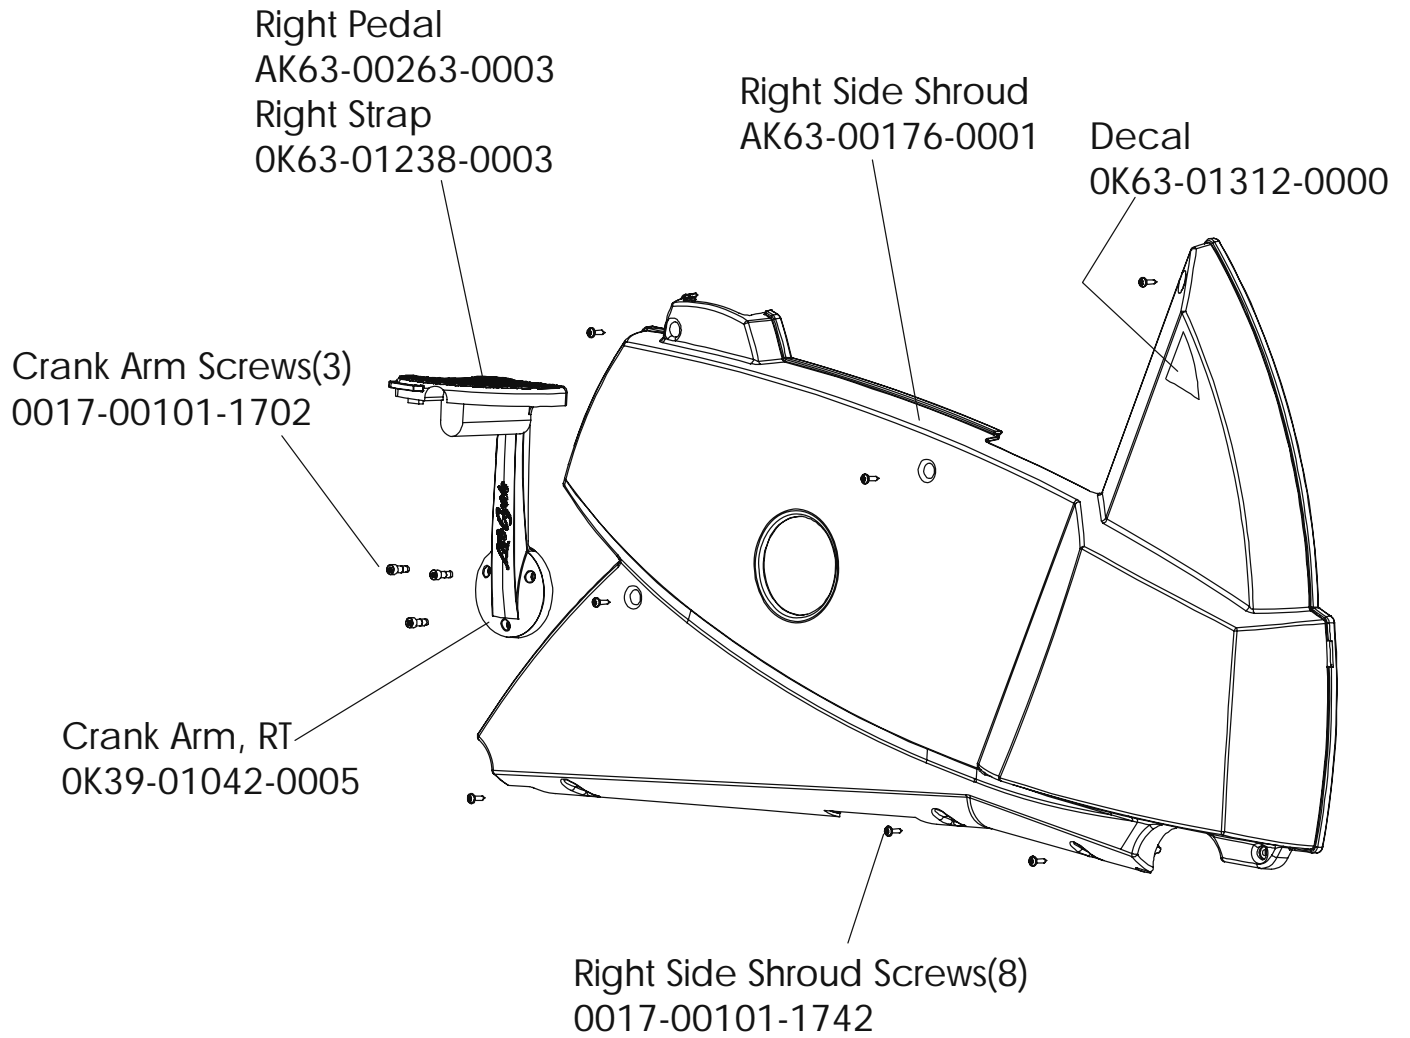



**Life Cycle 95Ci**  
**PCB Mounting Bracket AK63-00049-0000**

    **95C-0XXX-01**  
**S/N LCI100001**

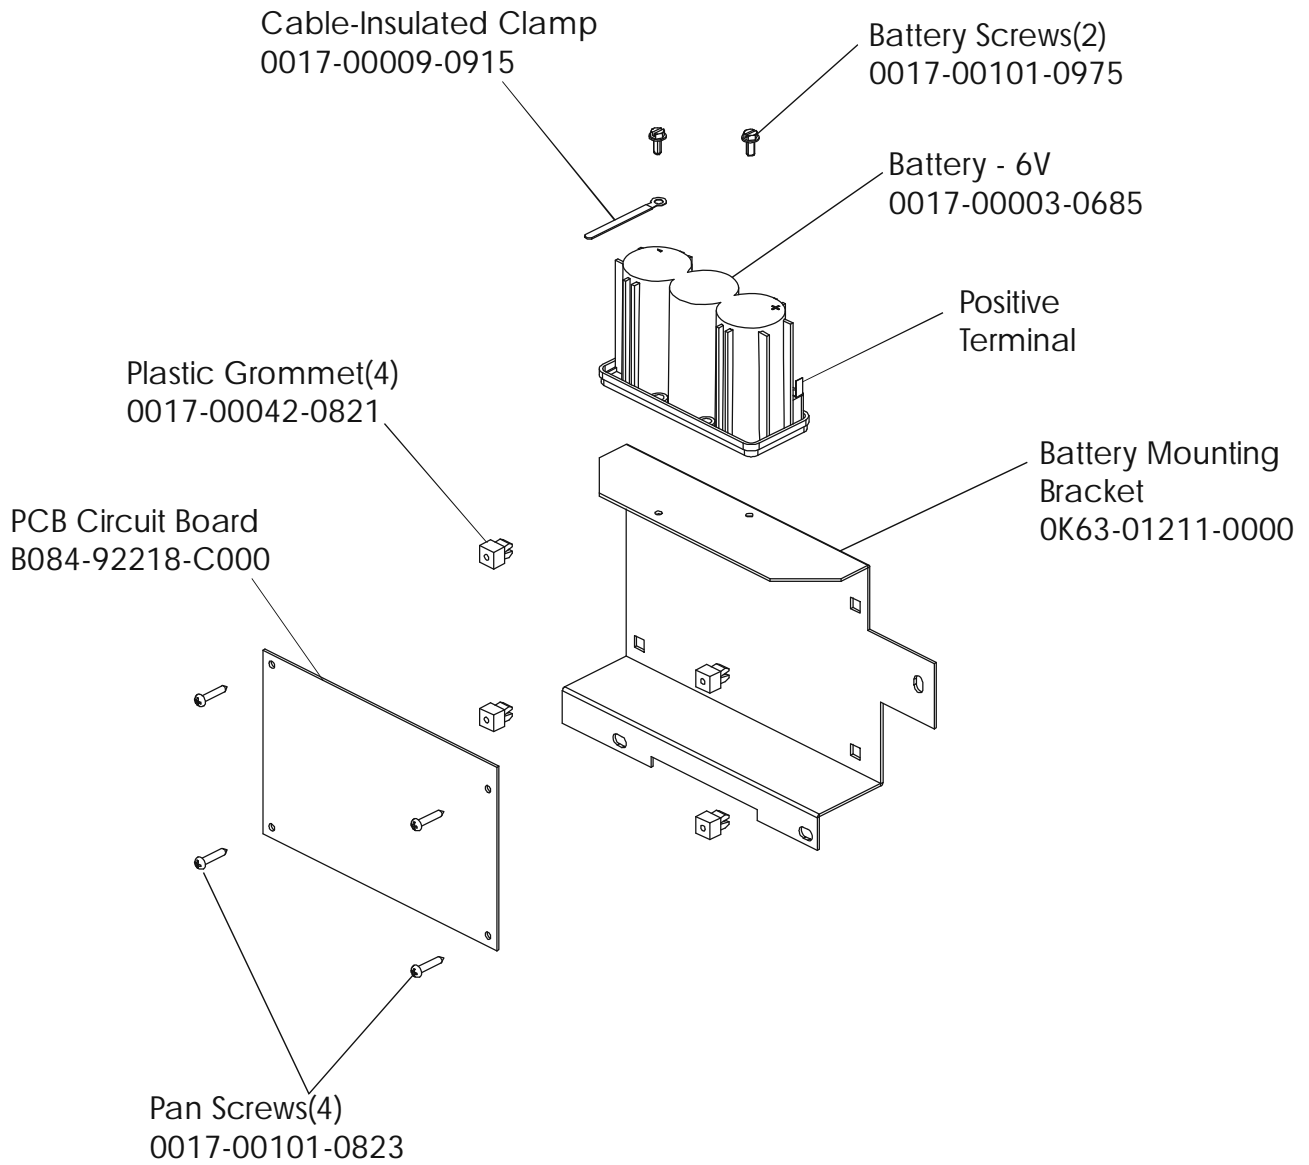 


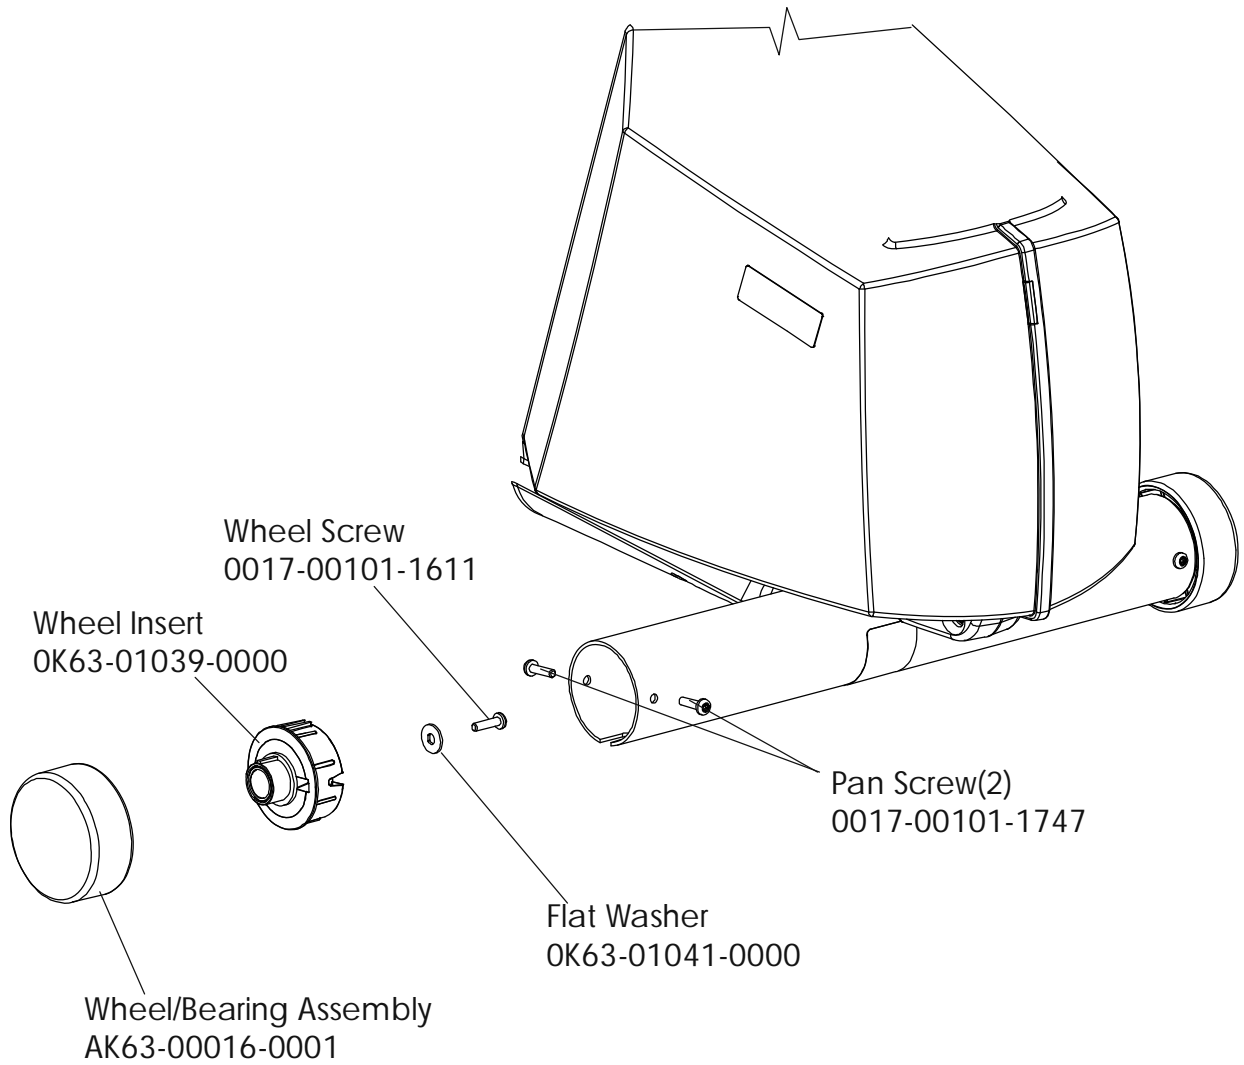

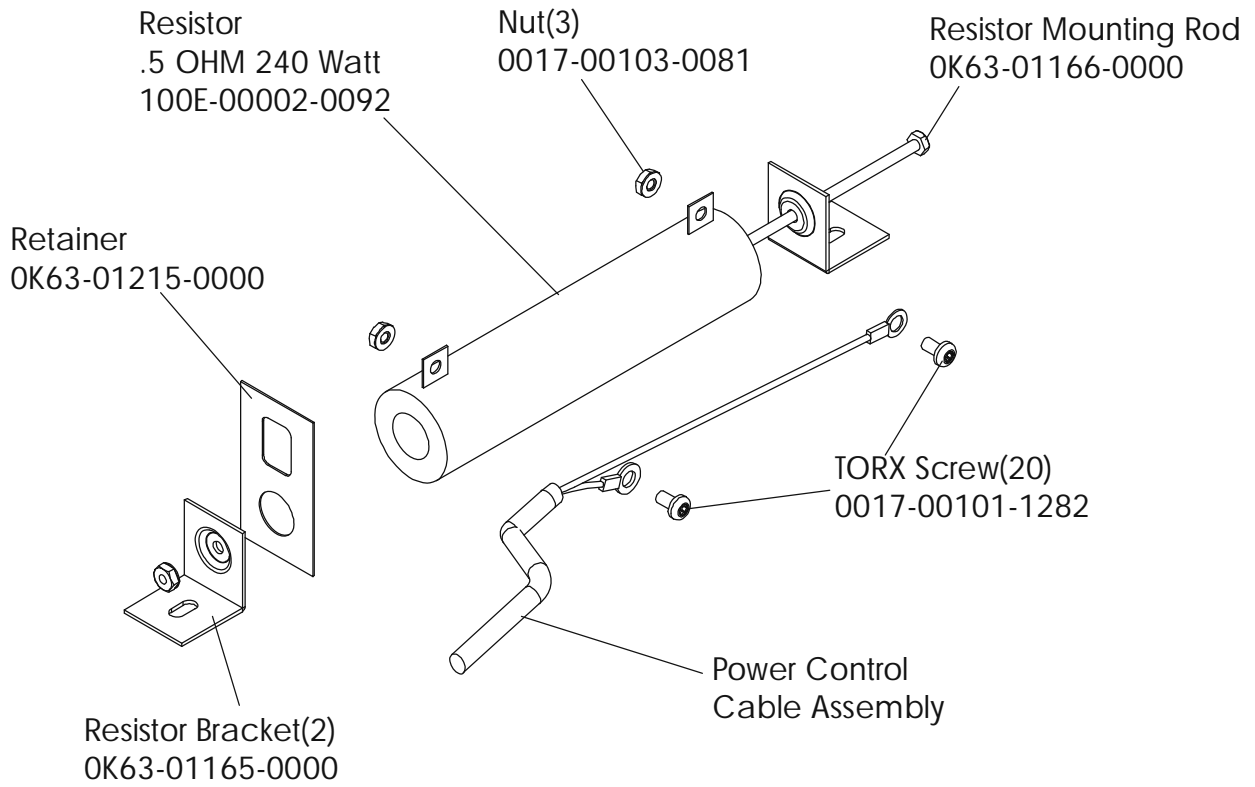


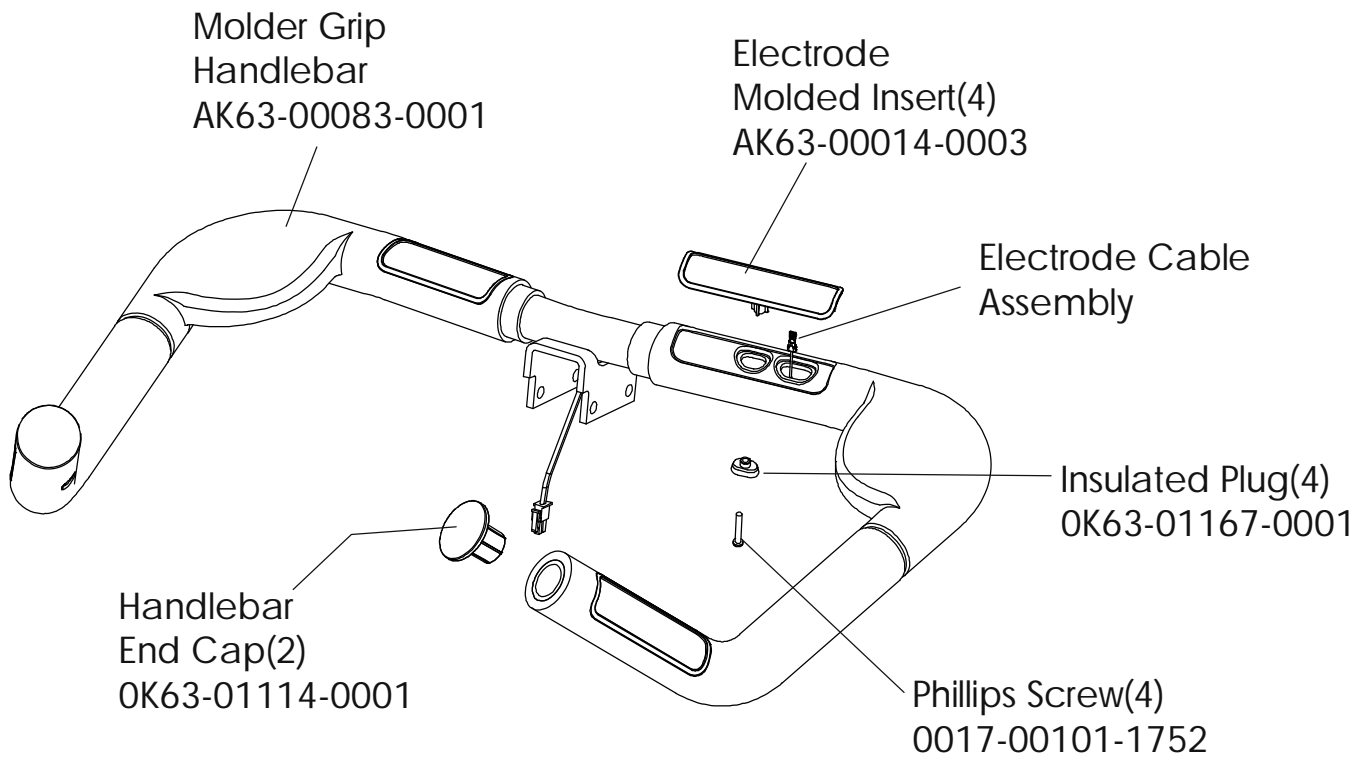



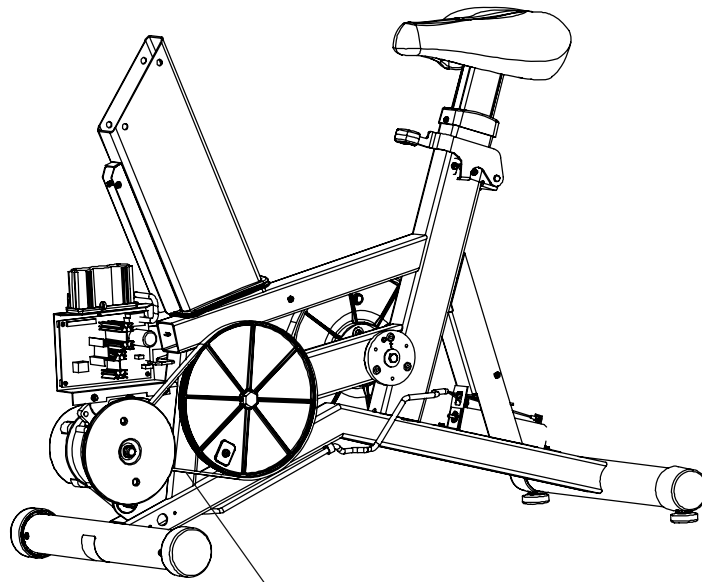

Alternator Belt  
OK63-01065-0000

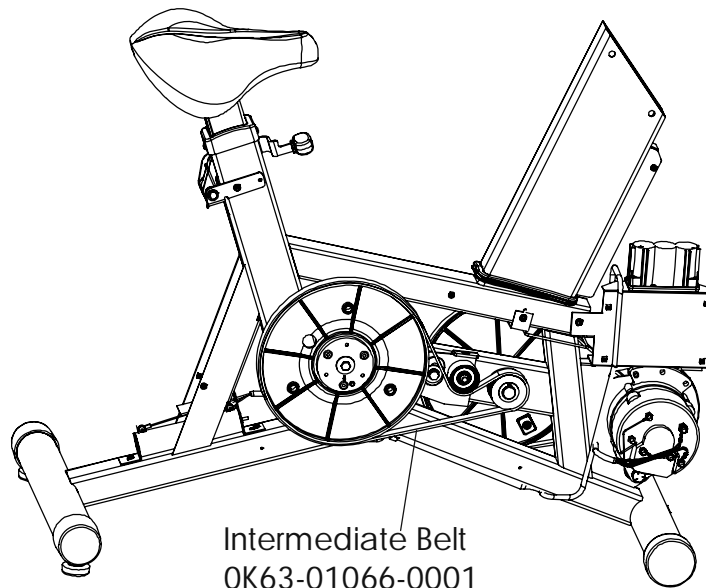 

Intermediate Belt  
OK63-01066-0001



**UNLABELED PARTS**

<b>DESCRIPTION</b>	<b>PART NO.</b>
BRUSH-HOLDER ASSY: MANDO ALT.A	0017-00009-0895
KIT: ACCESSORY-TRAY; STEALTH BM	GK63-00002-0062
SIGN: FACILITY SAFETY; ENG B	M051-00K20-A409
CARD: WARRANTY; COMMERCIAL +	M051-00K20-C408
INSTR: UNPACKING +	M051-00K63-A080
INSTR; ASSY; ENG +	M051-00K63-A081
ENDCAP: REAR-STABALIZER; STEALTH S/C-C	OK63-01219-0001
REED-SW MTGBRKT ASSY: MFG. B	AK63-00050-0000
CRANK-PULLEY ASSY; MFG. D	AK63-00051-0000
ALTERNATOR-PULLEY ASSY: MFG. B	AK63-00093-0000
HANDLEBAR-MOLD ASSY; PURCH. E	AK63-00156-0001
SEAT-ASSY: PURCH;DLXGRY S/C-D	AK63-00229-0003
SEATPOST-EXTR ASSY: MFG. S/C-E	AK63-00232-0002
KIT: SERV; MFG; ACCESSORY; POWER; 120/60 DOM BM	GK63-00002-0005